# 1 What's in the box

This Quick Start Quide and a Safety and Warranty booklet are also included in the box.

- If any item is damaged or missing contact your point of purchase for assistance
- Use only approved accessories
- Accessories may vary by country or region


#### Includes:

- Battery
- · Locking belt clip
- Adhesive Velcro
- Adhesive Magnet
- Water Resistant Sleeve
- USB Cable
- Screw Driver
- Keychain and Lanyard







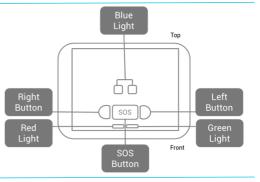

## 8


### Install and Charge the Battery

Your battery will not be installed or charged when you first unpack your device.

Install the battery by unscrewing the back cover and insert the battery.

To charge, connect one end of the data cable to the charger port at the bottom of the phone, and the other end to a power USB adaptor.

Then connect the USB adapter to a power outlet. Charge the device for 12 hours.

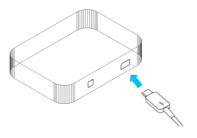



#### Turn on your device for the first time

Place your device outside.

Press the red button for 3 seconds.

The green led on the front of the device should flash for 3 seconds.

Activate your device by browsing to trackimo.com

